


# Quick Reference Guide for SLT Door Station

## Model – SS VPA

### Installation Instruction

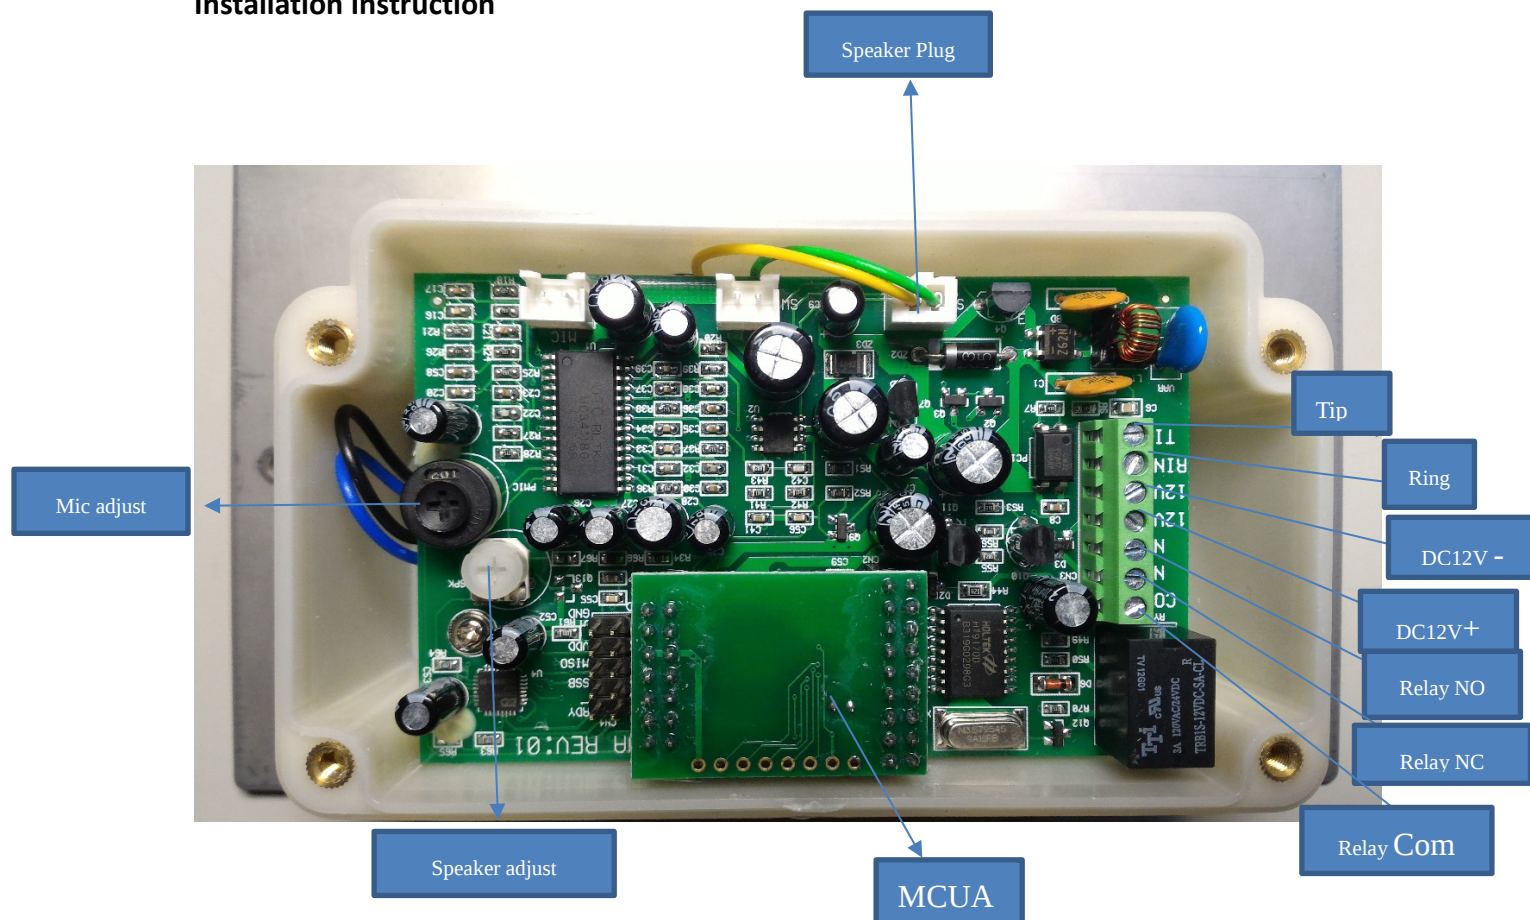

### Quick Programming Instruction

**Step 1:** To enter the programming (or review programming) mode:

Call the door station from a key phone, SLT phone or mobile phone. The door station will auto answer and send a “du” sound to acknowledge. Then, by entering # # within 5seconds, you are in programming mode. (Or by entering # # \* you are in reviewing mode).

**Step 2:** To store phone numbers for the door to call, enter Numbers in **Item 1 ~ 9** and Item 0:

Key-in the 1<sup>st</sup> ~ 9<sup>th</sup> and 10<sup>th</sup> stored phone Number respectively. Please enter store numbers in sequence. ie **item 1 ~ 9** and followed by **item 0**. Item 0 represents stored number 10.

**Step 3:** Press # button after finished. Hang up the handset to cancel the wrong programming.

## Programming and Reviewing Steps:

**Step 1:** The door station auto answers and plays a “du ” sound. Then, by entering # # # within 5 seconds, you are in programming mode. (Or by entering # # \* you are in reviewing mode).

**Step 2:** The door station voice wizard instructs you to “Login to the programming mode. Please enter the programming **item**”. (or” Login to the reviewing mode. Please enter the programming **item**”).

**Step 3:** The calling party enters the programming item and # button after finished.

**Step 4:** The door station instructs you to “Please enter the number” or announce the setting parameter.

**Step 5:** The calling party enters the numbers that the door station is required to dial or the parameter value. Then press # button after finished. (\* button stands for “pause” delay 1 second.)

**Step 6:** If the announced messages are as same as the intended ones, it means the programming are correct. If the messages are not correct, hang up to cancel the previous programming.

**Step 7:** After hearing the message “Please enter the programming **item**” again, escape to the Step 3 for the next programming or reviewing mode. The door station will hang up if no digit was entered within 5 seconds.

### Dimensions:

Physical size: Face plate: 170 x100mm, Stainless Cabinet: 174 x113 x 65mm

### Note:

- For all programming **ITEM Codes**, please refer to the user guide.
- The intercom is line powered for voice and calling.
- Relay operation requires 12v DC power