 


SN-902 Compact - Quick Installation Guide **English**

 
SN901 Base Station Installation.

1. Ensure that the base station antenna is firmly connected (anti-clockwise thread)
2. Plug the appropriate AC/DC adaptor into a standard AC power outlet, and the other end into the “DC In” jack on the rear of the base station.
3. Plug phone cord into the “LINE” Jack.
4. A standard telephone or answering machine can be plugged into the adjacent receptacle on the rear of the base station marked TEL.

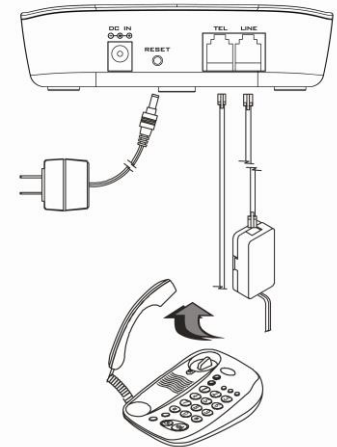

SN902 Handset and Charger Installation.

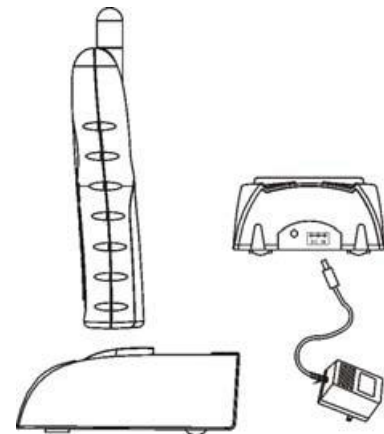

1. Plug the appropriate AC/DC adaptor into a standard AC power outlet, and the other end into the “DC In” jack on the rear of the Charger.
2. Install battery pack in the handset.
3. Check that the antenna is fitted.
4. Place handset onto the charger front slot.
5. Charge the battery for three hours before use.
6. After charging, the phone system is now ready for use.




Handset Registration

1. Press **MENU-6** to enter the registration mode
2. Press and hold the base’s PAGE button for 3 seconds until the In Use LED (white color) lights up and is flashing. The base station will beep to confirm that it is in the registration mode.
3. Press handset key “1”, this completes the registration process. The base station will assign a handset ID between 11 and 19 automatically. The assigned ID will be displayed on the handset LCD, indicating successful registration.

Handset features


1. TALK/FLASH ()
 - a. Used to make or receive a call.
 - b. Sends a Flash signal to the pstn phone line to access the call waiting feature provided by your local phone company.
 - c. If connected to a PBX, and during a call, pressing this button momentarily will put the caller on hold. Pressing again will take the caller off hold.
2. SPEAKERPHONE ()

Press and hold the key for 2-3 seconds to enable/disable the speakerphone during incoming, outgoing or intercom call.
3. 2-WAY INTERCOM ()

- a. Initiates an intercom call to another handset, or a group handset (group paging) to all registered handsets.
- b. Intercom calls are digital, secure duplex (2-way), and are transmitted without connection to the base station.

4. BROADCAST ()



- a. Half duplex (1-way) broadcasting to handsets for immediate announcement
- b. Half duplex (1-way) broadcasting to base stations


Re : Press the  key (in the middle of handset) to activate the broadcast function.

5. Left/Right Soft Keys ( )


- a. Make menu selection.

6. Up() /Down() Scrolling Keys

- a. Scroll through records and menu selections.
- b. Adjust receiver voice volume when in the Talk mode.
- c. Press  to review call log when in the Standby mode.
- d. Press  to enter phonebook when in the Standby mode.

7. END; On/Off Key ()

- a. Ends a call.
- b. Leaves current menu operation, up one level.
- c. Press for 3 seconds to power off the handset.

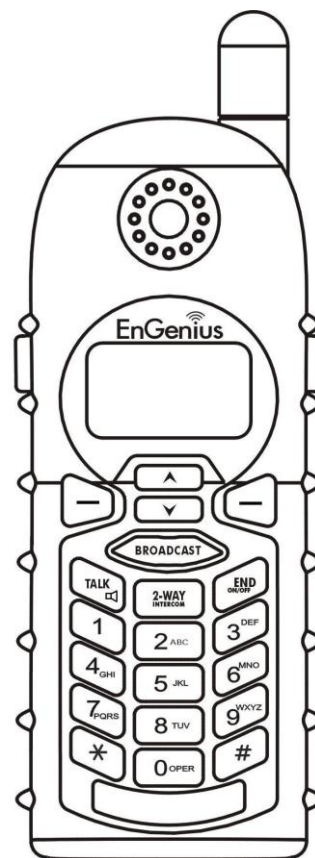

Base Features

1. Reset Button (RESET)
 - a. Restores base station to factory settings
 - b. Reset button is recessed to prevent accidental system reset.
 - c. All handsets (including administrator) and additional base(s) need to be re-registered after a base station reset.
2. Page Button (PAGE)

To search for a misplaced handset; press "PAGE" button, all registered handsets will beep for 30 seconds. Press "PAGE" again or any key on a handset to stop beeping..
3. Registration Button (PAGE)

Enters registration mode along with handset, assigns handset ID (11-19).
4. Line Jack

Standard RJ-11C/CA-11A connector to plug in the telephone line
5. Telephone Jack

A second RJ-11C to plug in an answering machine or handset.
6. DC In: to plug in the power adaptor

