 


Quick Reference Guide for SLT Door Station

Model – AN VP

Installation Instruction

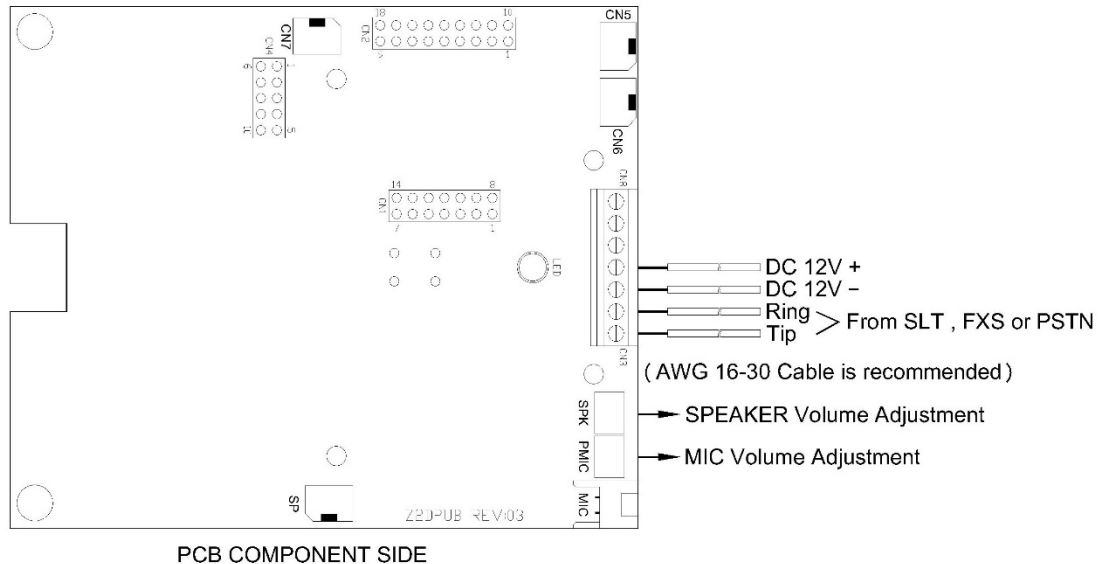

Programming and Reviewing Steps:

- Step 1:** The door station auto answers and plays a “du ” sound. Then, by entering ### (three times) within 5 seconds, you are in programming mode. (Or by entering ## * you are in reviewing mode).
- Step 2:** The door station voice wizard instructs you to “Login to the programming mode. Please enter the programming **item**”. (or” Login to the reviewing mode. Please enter the programming **item**”).
- Step 3:** The calling party enters the programming item and # button after finished.
- Step 4:** The door station instructs you to “Please enter the number” or announce the setting parameter.
- Step 5:** The calling party enters the numbers that the door station is required to dial or the parameter value. Then press # button after finished. (* button stands for “pause” delay 1 second.)
- Step 6:** If the announced messages are as same as the intended ones, it means the programming are correct. If the messages are not correct, hang up to cancel the previous programming.
- Step 7:** After hearing the message “Please enter the programming **item**” again, escape to the Step 3 for the next programming or reviewing mode. The door station will hang up if no digit was entered within 5 seconds.

Quick Programming Instruction

Step 1: To enter the programming (or review programming) mode:

Call the door station from a key phone, SLT phone or mobile phone. The door station will auto answer and send a “du “sound to acknowledge. Then, by entering # # # (three times) within 5seconds, you are in programming mode. (Or by entering # # * you are in reviewing mode).

Step 2: To store phone numbers for the door to call, enter Numbers in **Item** 1 ~ 9 and Item 0:

Key-in the 1st~ 9th and 10th stored phone Number respectively. Please enter store numbers in sequence. ie **item** 1 ~ 9 and followed by **item** 0. Item 0 represents stored number 10.

Step 3: Press # button after finished. Hang up the handset to cancel the wrong programming.

Dimensions: H 140mm, W 94mm, D 31mm.

Note:

- If the speaker volume is low at the door station, please apply the 12 Volt AC/DC Source of local power to increase the DS speaker volume to make the reception voice louder.
- This door station is not applicable for relay operations.
- For all programming **ITEM Codes**, please refer to the user guide.